

INSTALLATION


1. INSTALL GENERATOR

- (a) Install the 2 bolts and generator.

Torque:

12 mm head: 25 N·m (255 kgf·cm, 18 ft·lbf)

14 mm head: 54 N·m (550 kgf·cm, 40 ft·lbf)

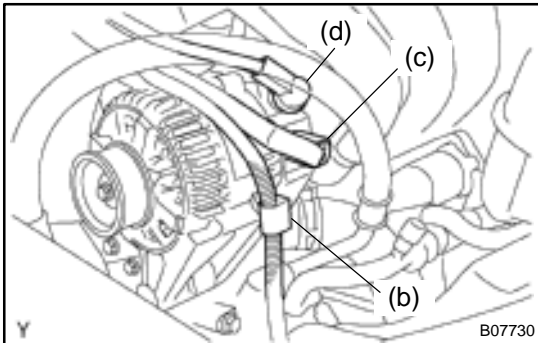


- (b) Connect the wire clamp to the wire clip on the rectifier end frame.

- (c) Connect the generator connector.

- (d) Connect the generator wire, and install the nut and cap.

2. INSTALL RH ENGINE MOUNTING INSULATOR (See page [EM-59](#))

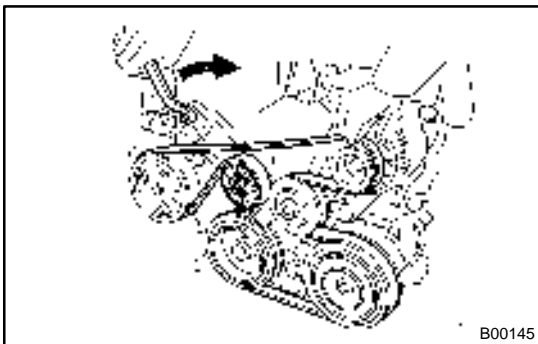

3. INSTALL DRIVE BELT

- Turning the drive belt tensioner clockwise, and install the drive belt.