


REMOVAL

1. REMOVE DRIVE BELT

Turn the drive belt tensioner slowly clockwise and loosen it. Then, remove the drive belt and replace the drive belt tensioner little by little and fix it quietly.

2. REMOVE RH ENGINE MOUNTING INSULATOR (See page EM-54)

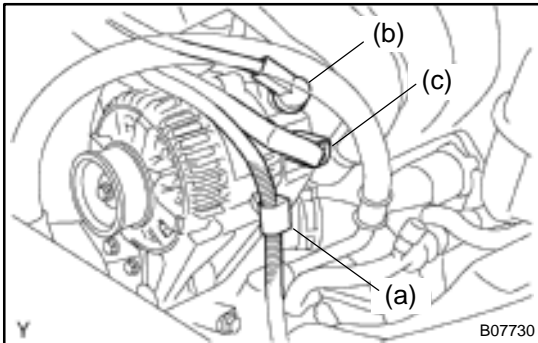


3. REMOVE GENERATOR

(a) Disconnect the wire clamp from the wire clip on the rectifier end frame.

(b) Remove the cap and nut, and disconnect the generator wire.

(c) Disconnect the generator connector.

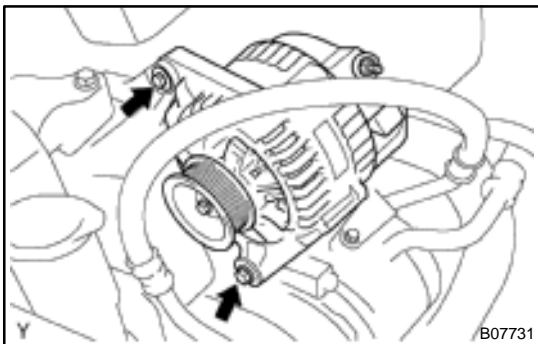

(d) Remove the 2 bolts and generator.